 
 
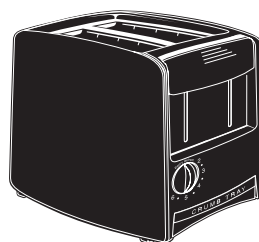 
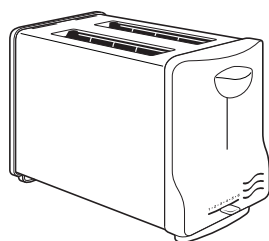 
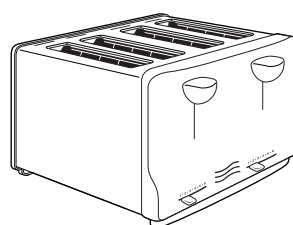 


Toasters

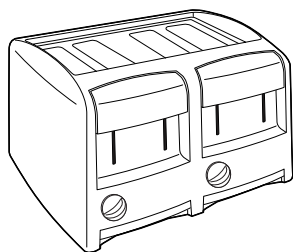

English 2
USA: 1-800-851-8900
Canada : 1-800-267-2826

Parts and Features

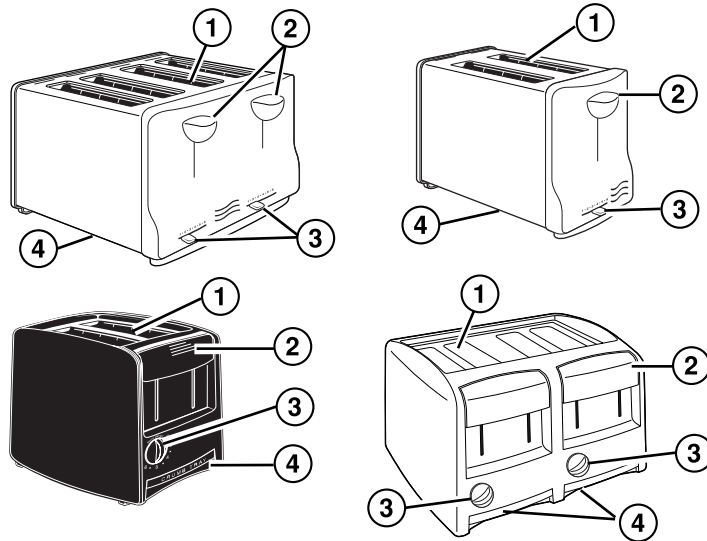

1. Extra Wide Slots with Bread Guides

2. Bread Lifter – Push down the Bread Lifter to start the toaster. The Bread Lifter may be lifted up at any time to stop toasting.

3. Shade Selector – The Shade Selector ranges from light toast (setting 1), to dark toast (setting 6).

NOTE: Please adjust to desired setting before first use.

4. Swing Open or Slide-Out Crumb Tray

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plug, or toaster in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, or moving toaster.
6. Do not operate toaster with a damaged cord or plug or after toaster malfunctions or has been damaged in any manner.
Call our toll-free customer service number for information on examination, repair, or adjustment.
7. The use of accessory attachments not recommended by Hamilton Beach/ Proctor-Silex, Inc. may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use toaster for other than intended use.
12. Oversized foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
13. A fire may occur if toaster is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
14. Do not attempt to dislodge food when toaster is plugged in.
15. This product is for household use only.
16. Failure to clean crumb tray may result in a fire hazard.
17. Do not operate toaster while unattended.

18. Before unplugging toaster, make sure bread lifter is in “up” position.
19. Do not cook, warm, or toast rice cakes, fried foods, or non-bread items.
20. Safeguard toaster from access to pets.
21. Do not clean with metal scouring pads. Pieces can break off pad and touch electrical parts resulting in risk of electrical shock.

SAVE THESE INSTRUCTIONS

CONSUMER SAFETY INFORMATION

This appliance is intended for household use only.

NEVER LEAVE TOASTER UNATTENDED!

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over, a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the toaster. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

How to Toast

1. Plug toaster into electrical outlet.
2. Place bread in slots. Select toast shade and press down the Bread Lifter. If toasting one slice, place in slot marked “ONE SLICE.”
3. At the end of the toasting cycle, the bread will pop up automatically. To stop the toasting cycle sooner, lift up on bread lifter.

⚠ WARNING



Fire Hazard

Do not operate while unattended.

Do not cook, warm, or toast rice cakes, fried foods, or non-bread items.

Heat pastry-filled or frosted items on lightest setting.

Do not cover toaster or use near curtains, drapes, walls, or under cabinets.

Close supervision is necessary when used by or near children.

Never cover toaster or toast slots during operation.

 
Always unplug toaster when not in use.

Failure to follow these instructions can result in death or fire.

Cleaning

NOTE: If the toaster is used daily, the crumb tray should be cleaned weekly.

1. Unplug toaster and let cool.
2. If the toaster has a **Swing Open Crumb Tray** on the bottom of the toaster, place the toaster on its side, as shown. Open the Crumb Tray and wipe off with clean cloth, then close.
3. If the toaster has a **Slide-Out Crumb Tray**, leave the toaster sitting on the counter. Slide out crumb tray, discard crumbs and wipe tray with clean cloth. Replace crumb tray.
4. Wipe outside of toaster with a damp cloth. Do not use abrasive cleansers that may scratch the surface of the toaster.

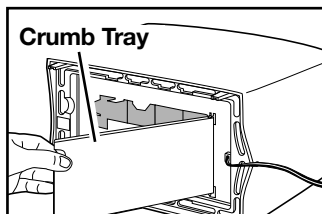

Tips and Troubleshooting

- Toasting is affected by the temperature of the bread, room temperature or frozen; the moisture content, fresh or several days old; and the size, thick or thin.
- If you try to toast two batches of toast, one right after another, the Bread Lifter may not lock down immediately. If you hear a buzzing sound when the Bread Lifter is pushed down, this indicates that the thermostat has not reset. Wait a few seconds and try again.

- Thick foods may become wedged in the toaster slot. If the food is not released, the toaster will automatically shut off at the end of the toasting cycle. Unplug the toaster and let cool. Use a wooden utensil to remove food.
- Setting 6 is the darkest shade of toast color. If a darker shade is desired, watch closely and toast for two cycles. When toasting only one slice, if a toaster slot indicates “ONE SLICE,” make sure the bread is placed in that slot of the toaster. When toasting a single slice you may notice variations in bread color from side to side.

Toasting Guide

FOOD	SUGGESTED SETTING
Regular bread	2 to 5
English muffins	3 to 4
Bagels	3 to 6
Frozen waffles	2 to 3
Toaster pastries (such as Pop Tarts®)*	1

® Pop Tart is a registered trademark of the Kellogg Co.

* **NOTE:** Hamilton Beach/Proctor-Silex does not recommend heating toaster pastries in your toaster. Toaster pastries should be heated in a toaster oven broiler. However, if an alternative is not available, and you must use the toaster, be sure to set the toaster to the lowest possible setting, and never leave the toaster unattended during use.

Customer Service

If you have a question, call our customer service number. Before calling, please note the model, type, and series numbers. These numbers can be found on the bottom of your toaster and will help us answer your question.

LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship for a period of two (2) years for Hamilton Beach Portfolio products, one (1) year for Hamilton Beach products or one hundred eighty (180) days for Proctor-Silex products from the date of original purchase, except as noted below. During this period, we will repair or replace this product, at our option, at no cost. THE FOREGOING WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID, AND ALL CLAIMS FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED. There is no warranty with respect to the following, which may be supplied with this product: glass parts, glass containers, cutter/strainer, blades, and/or agitators. This warranty extends only to the original consumer purchaser and does not cover a defect resulting from abuse, misuse, neglect, use for commercial purposes, or any use not in conformity with the printed directions. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER SERVICE NUMBER. (For faster service please have model, series, and type numbers ready for operator to assist you.)

CUSTOMER SERVICE NUMBERS

In the U.S. 1-800-851-8900
In Canada 1-800-267-2826

Web site address: www.hamiltonbeach.com or
www.proctorsilex.com

KEEP THESE NUMBERS FOR FUTURE REFERENCE!

HAMILTON BEACH ♦ PROCTOR-SILEX, INC.
263 Yadkin Road, Southern Pines, NC 28387

PROCTOR-SILEX CANADA, INC.
Picton, Ontario K0K 2T0

Web site address: www.hamiltonbeach.com or www.proctorsilex.com

840082900

Printed in Mexico

3/01